




Foxglove Double Sconce

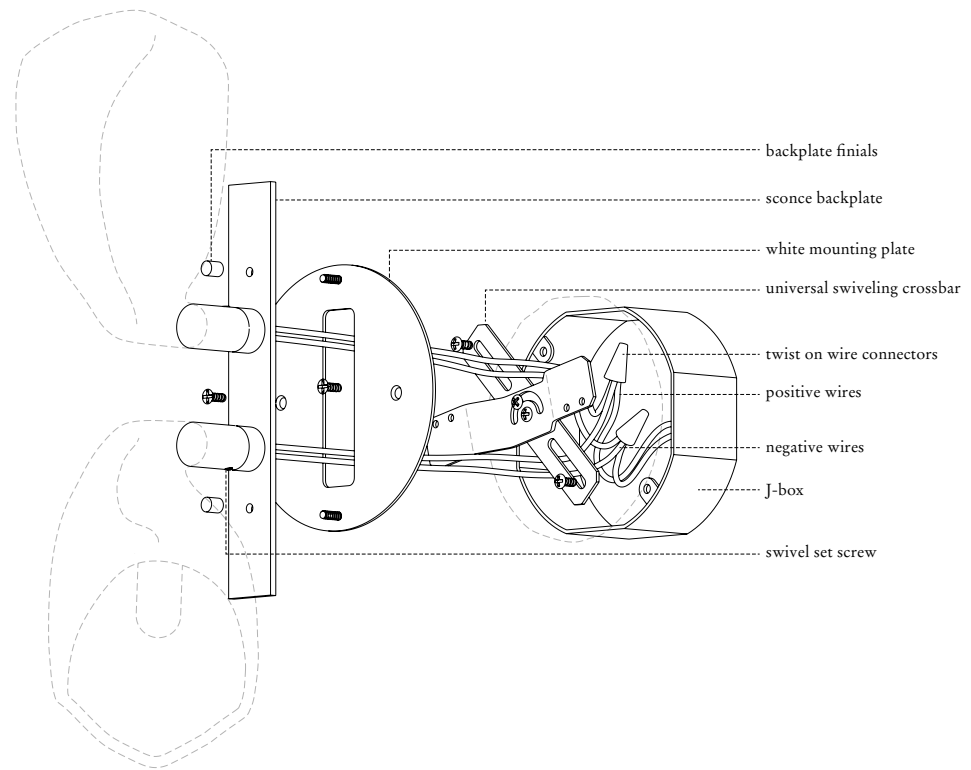

Use gloves or a soft cloth during installation to prevent marks on the finish.

WALL PREPARATION

1. Turn power supply off at the circuit breaker box.
2. Attach universal swiveling crossbar to J-box, aligning bracket screw holes to desired orientation in regard to mounting plate. Tighten swivel screw to lock in position.
3. Install white mounting plate onto the crossbar using the provided flat head screws, pull J-box wires out through the center opening.
4. Skim coat over mounting plate and paint to match wall.

WIRING INSTRUCTIONS

1. Connect negative supply wire (typically white or the ribbed, marked side of the two-conductor cord) to negative fixture leads with twist on connector.
2. Connect positive supply wire (typically white or the ribbed, marked side of the two-conductor cord) to negative fixture leads with twist on connector.
3. Tuck positive and negative wire clusters back into the J-box.
4. Secure sconce backplate with provided finial caps.
5. Using a hex key, slightly loosen swivel set screws to adjust shade angle. Tighten to lock in position.