



ASSEMBLY INSTRUCTIONS


EDMUND BED



PARTS LIST

VERTICAL POST-	4
FOOTBOARD-	1
SIDE RAILS-	2
HEADBOARD-	1
SLAT KIT-	1
HEADBOARD STRETCHER-	1
CANOPY RAIL-	4
CANOPY BRACKET-	4
BRACKET SCREW-	16

Made
in
LA

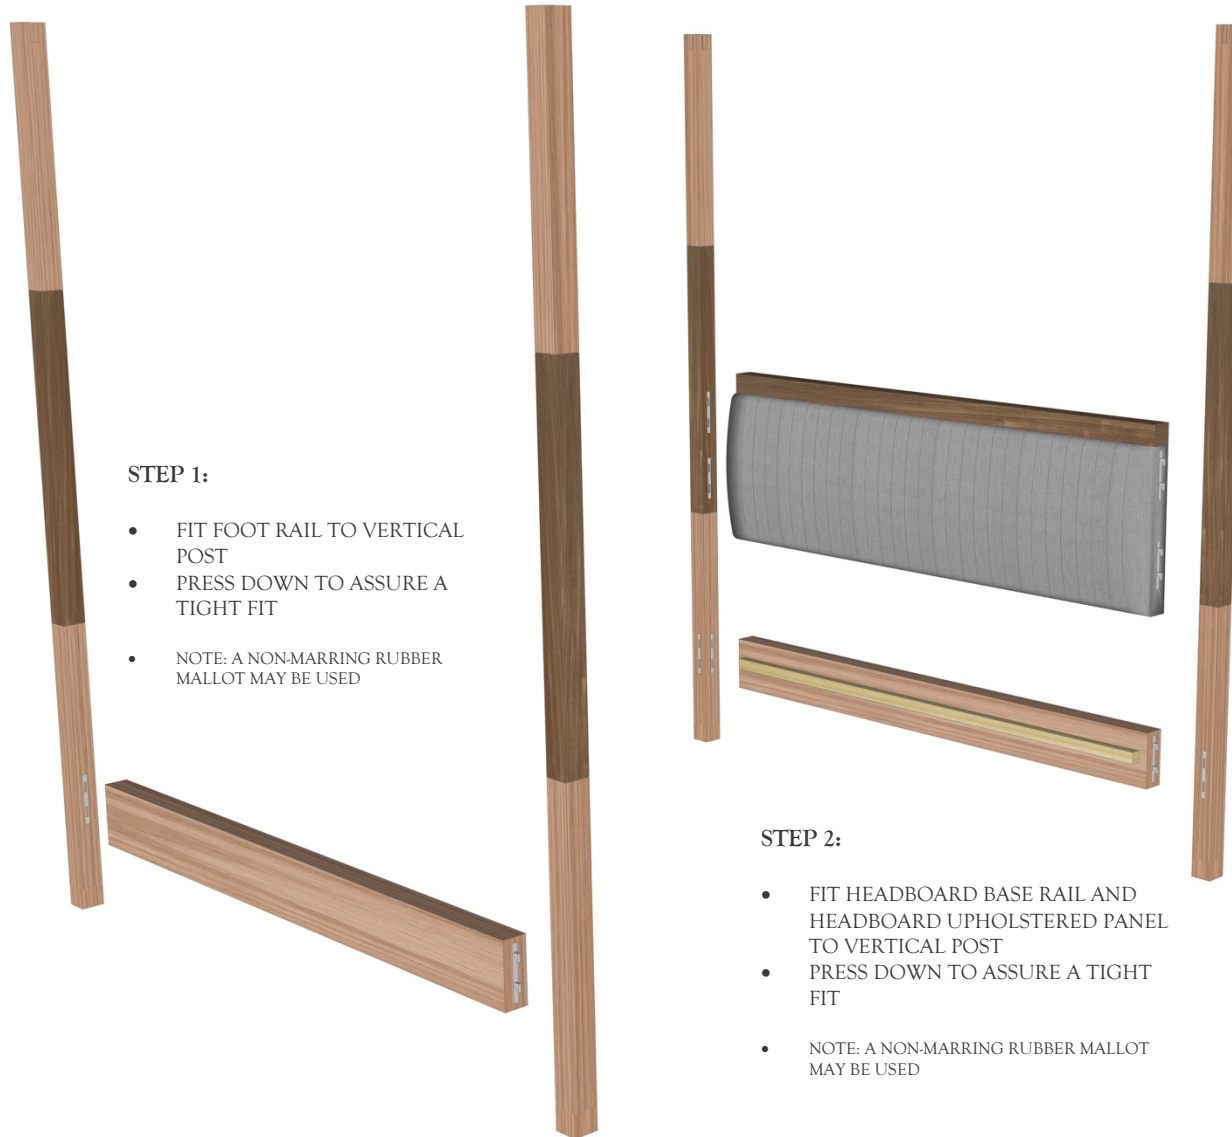


STEP 1:

- FIT FOOT RAIL TO VERTICAL POST
- PRESS DOWN TO ASSURE A TIGHT FIT
- NOTE: A NON-MARRING RUBBER MALLOT MAY BE USED

STEP 2:

- FIT HEADBOARD BASE RAIL AND HEADBOARD UPHOLSTERED PANEL TO VERTICAL POST
- PRESS DOWN TO ASSURE A TIGHT FIT
- NOTE: A NON-MARRING RUBBER MALLOT MAY BE USED

Made
in
LA

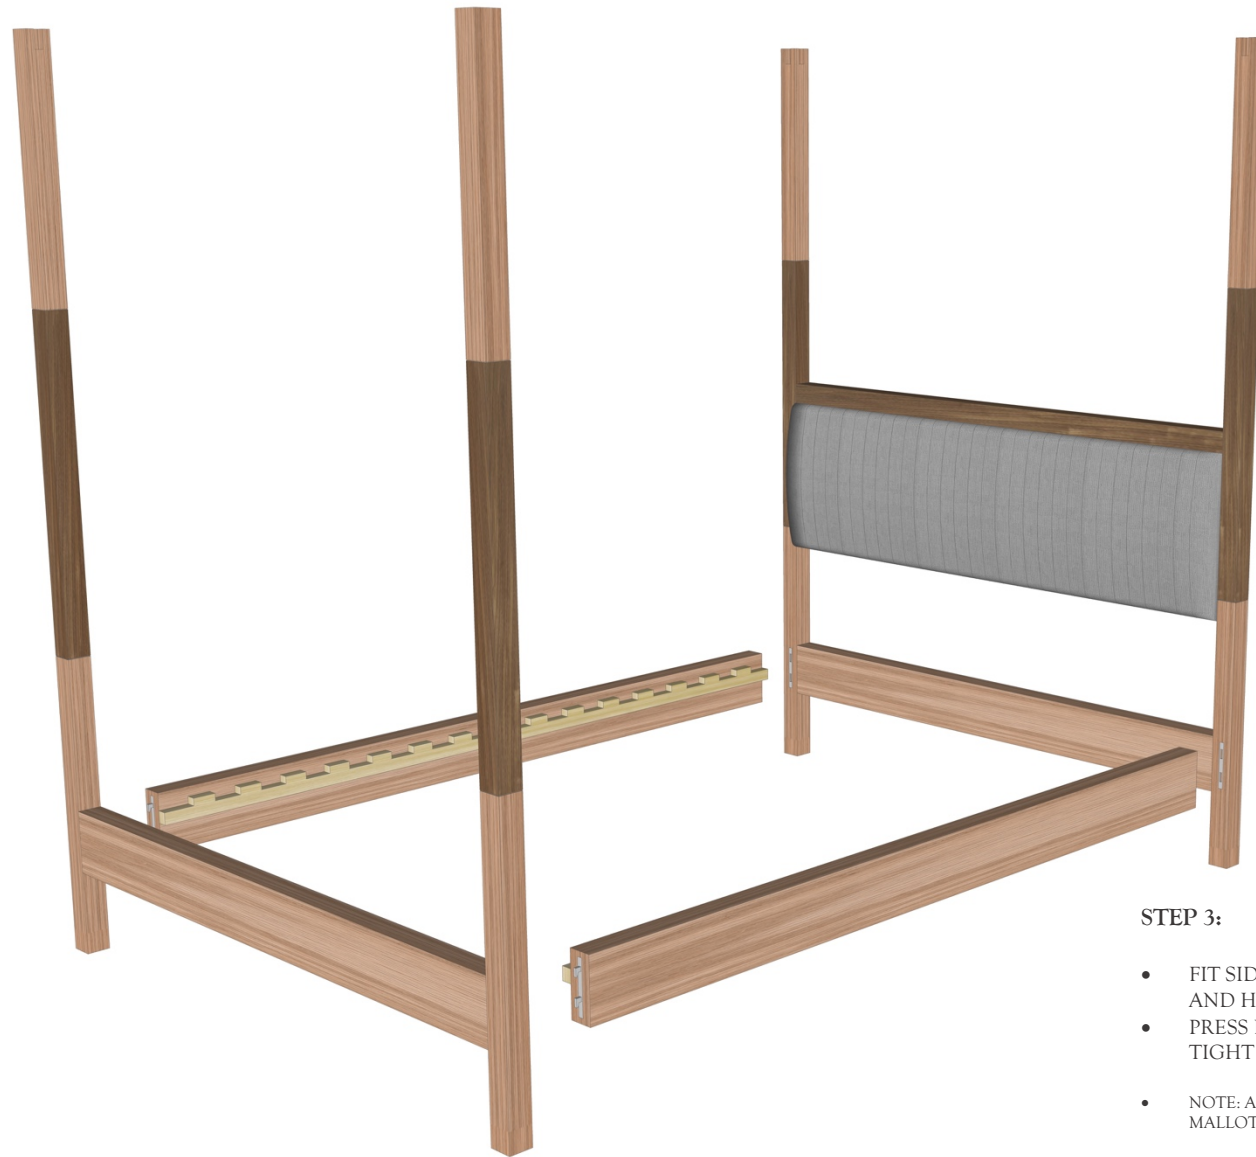

STEP 3:

- FIT SIDE RAILS TO FOOTBOARD AND HEADBOARD ASSEMBLY
- PRESS DOWN TO ASSURE A TIGHT FIT
- NOTE: A NON-MARRING RUBBER MALLOT MAY BE USED

Made
in
LA



STEP 4:

- INSTALL CANOPY RAILS
- AFFIX CANOPY RAILS USING PROVIDED BRACKETS AND SCREWS
- NOTE: A LADDER MAY BE REQUIRED FOR THIS ASSEMBLY



STEP 5:

- DROP IN SLATS WITH THREE VERTICAL SUPPORT LEGS EVENLY SPACED

Made
in
LA