



Made
in
LA

PARTS LIST


HEADBOARD-	1
FOOTBOARD-	1
SIDE RAILS-	2
FOOTBOARD BASE-	1
SLAT KIT-	1
CONNECTOR BOLT	4



STEP 1:

- AFFIX SIDE RAILS TO HEADBOARD PANEL
- PRESS DOWN TO ASSURE A TIGHT FIT
- NOTE: A NON-MARRING RUBBER Mallet MAY BE USED

Made
in
LA

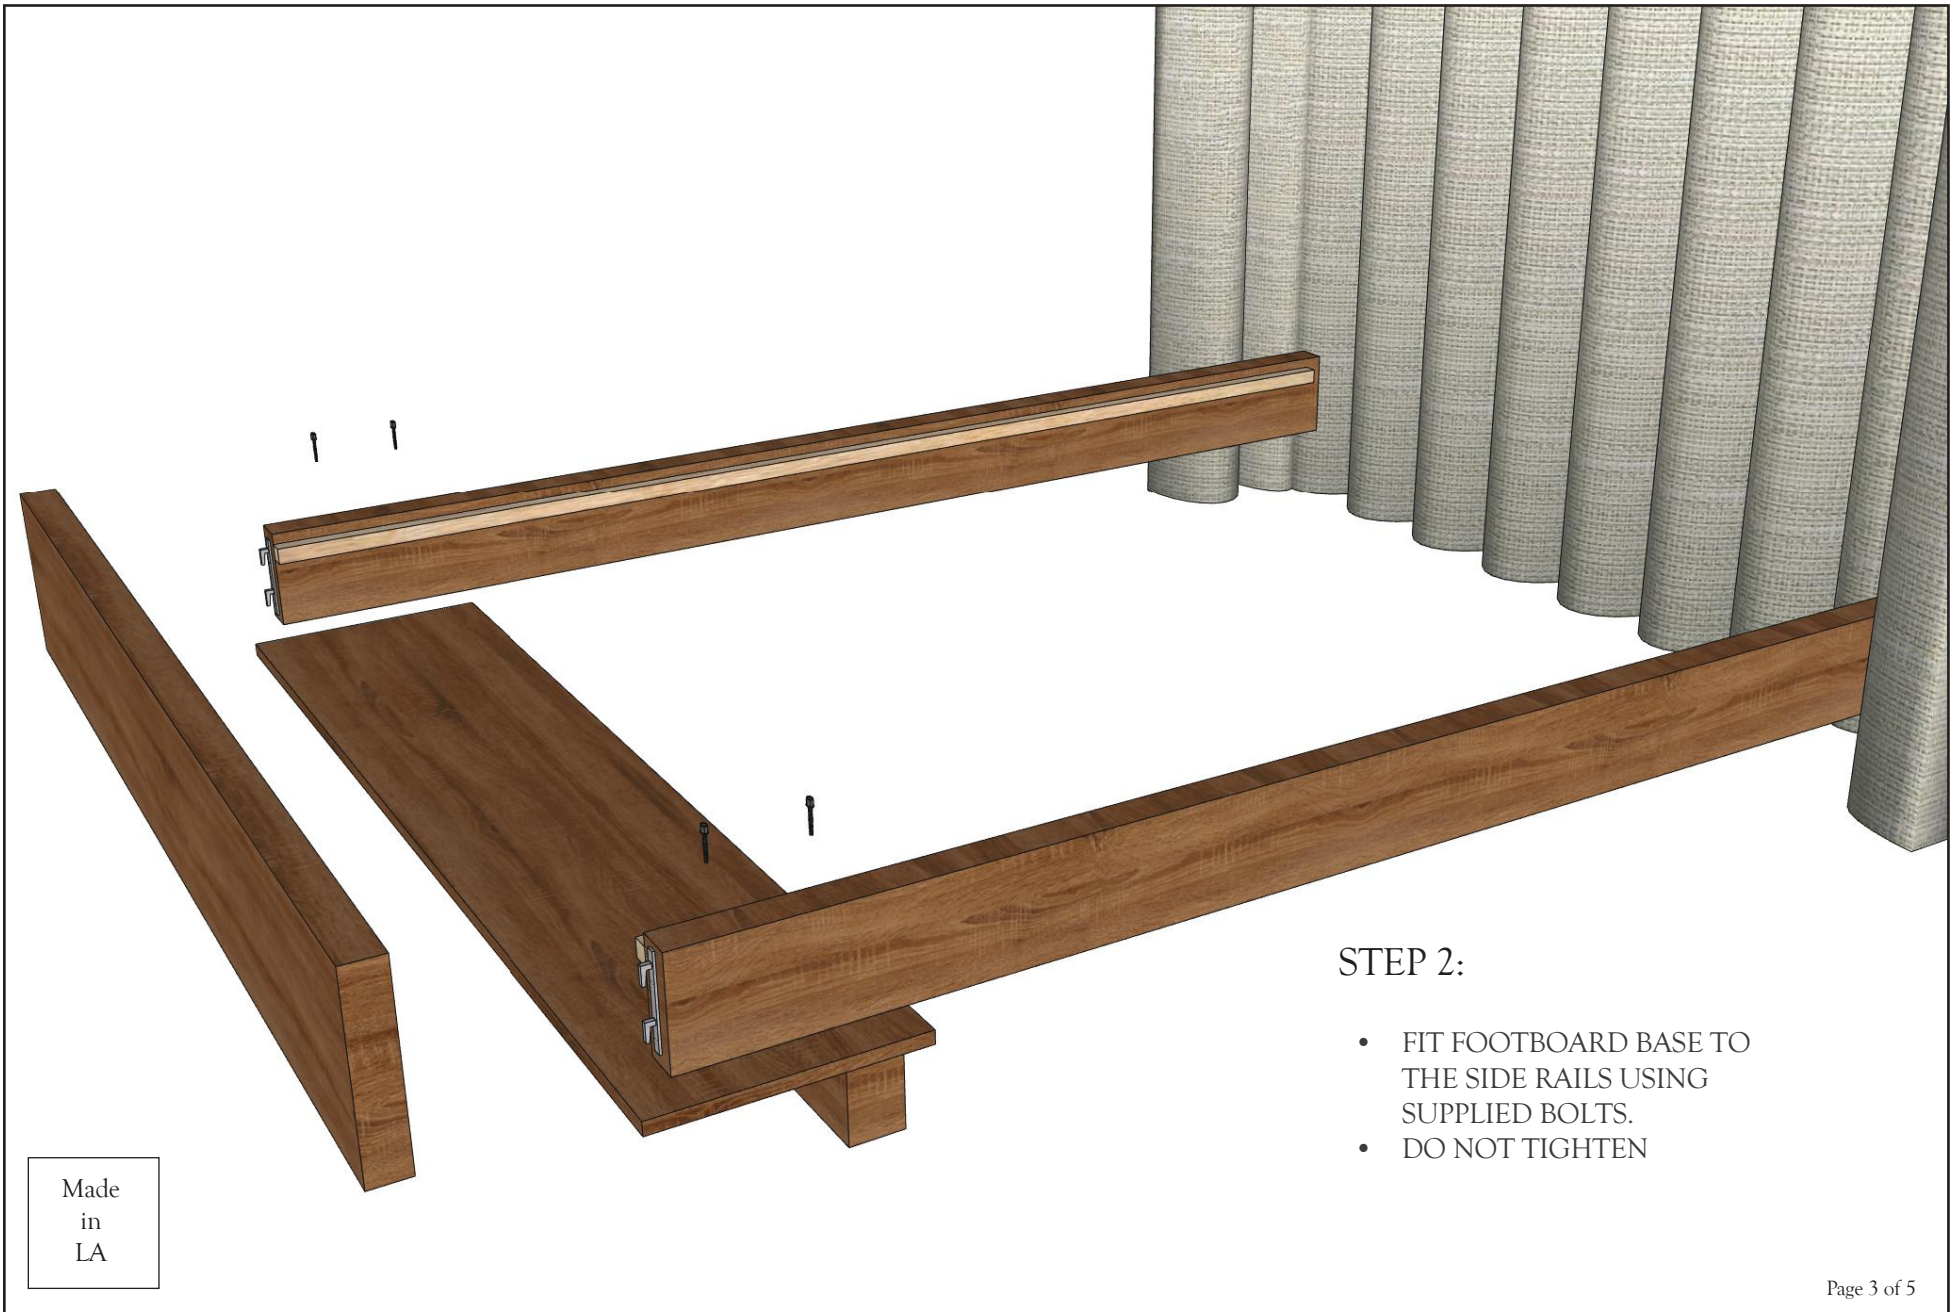

STEP 2:

- FIT FOOTBOARD BASE TO THE SIDE RAILS USING SUPPLIED BOLTS.
- DO NOT TIGHTEN

Made
in
LA



STEP 3:

- AFFIX FOOTBOARD TO SIDE RAILS
- TIGHTEN BOLTS SECURING FOOTBOARD BASE
- NOTE: A NON-MARRING RUBBER MALLOT MAY BE USED

Made
in
LA



STEP 4:

- DROP IN SLATS WITH THREE VERTICAL SUPPORT POSTS EVENLY SPACED
- UTILIZING PREDRILLED HOLES, SCREW SLATS TO SIDE RAILS USING PROVIDED SCREWS

Made
in
LA