

PARTS LIST

HEADBOARD-	1
FOOTBOARD-	1
SIDE RAILS-	2
SLAT KIT-	1
CORNER BRACKET-	2
1/4-20 x 3/4" HEX HEAD BOLTS-	12


Made
in
LA



STEP 1:

- FIT SIDE RAILS TO THE HEADBOARD
- FIT SIDE RAILS TO FOOTBOARD
- PRESS DOWN TO ASSURE A TIGHT FIT
- NOTE: A NON-MARRING RUBBER MALLET MAY BE USED

Made
in
LA

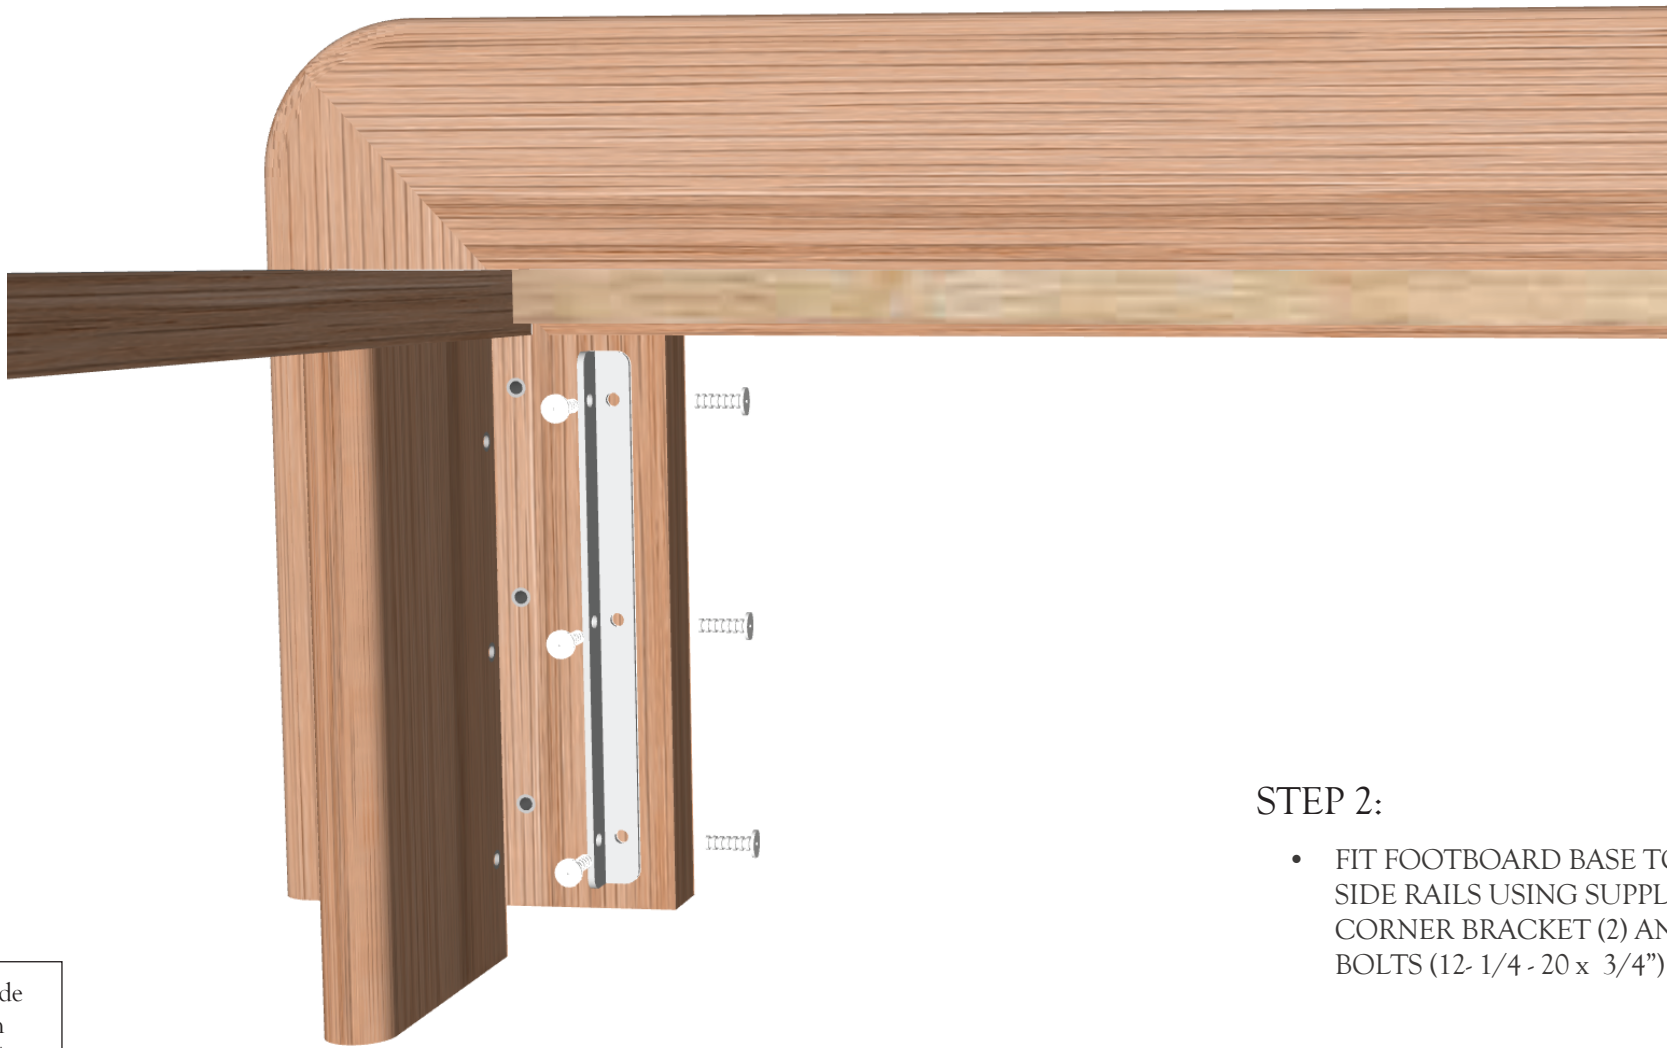

STEP 2:

- FIT FOOTBOARD BASE TO THE SIDE RAILS USING SUPPLIED CORNER BRACKET (2) AND BOLTS (12- 1/4 - 20 x 3/4")

Made
in
LA



STEP 3:

- DROP PLATFORM WITH VERTICAL SUPPORT SLAT FIRST
- DROP IN SECOND PLATFORM

Made
in
LA